



Tent Heater 80,000 BTUs

To Start the Heater:

1. Turn on Propane tank
 - a) You may smell a little gas as it travels through the regulator to the heater. This is normal.
 - b) If you feel there is a problem call the Bucks Mont Party Rental emergency line @ (215) 345-4556
2. Turn toggle switch (in back of the heater) up to the "heat" position
 - a) The fan will turn on
 - b) If you don't hear the fan turn on check that the electricity is still plugged into the outlet and that the outlet works.
 - c) The heater will ignite after a few seconds and warm air will follow

Set the desired temperature on the thermostat (grey box)

Shut Down After Event ****VERY IMPORTANT****

1. Turn the toggle switch to the center "off" position
2. Turn off the propane tank